



## Roof

### Windtight and rainproof on the outside

#### Mounting of nail sealing tape



- Stick the nail sealing tape to the counter batten
- **Nail sealing tape should not exceed the width of the counter batten**



- Use backing strip for simple and quick application:
- Fold back the starting part of the backing strip
- Backing strip is handy and can be removed quickly later



- Align the counter batten with the backing strip folded back on the roof underlay membrane




- Separate the backing strip and press the counter batten down



## Windtight and rainproof on the outside



- Finally mount the roof underlay membrane by screwing or nailing the counter battens to a solid support

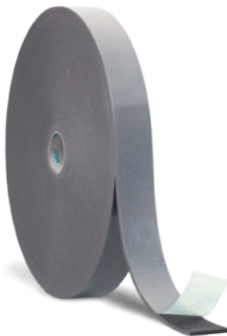

**Nail sealing tape**

P. 137