

## Wall: Solid construction *Airtight on the inside*

### Joining window to base plate



#### Initial situation:

- Floor-deep window / façade element installed



- Clean the substrates to be bonded
- Apply Dockskin 200
- Use a roller to apply thinly and over the entire surface of the concrete floor
- Wait until Dockskin 200 is completely dry



- Roll out Fentrim to required length
- Add approx. 15–20 cm on both sides (to form sides of trough)
- Cut Fentrim to required length



- Remove about 10 cm of 1st backing strip and stick to window / façade element using a small area of adhesion
- Extend approx. 15–20 cm on left and right


## Wall: Solid construction *Airtight on the inside*



- Remove 1st backing strip little by little
- Align and fix tension-free
- Press on firmly



- Remove more backing strip little by little
- Bend without introducing tension
- Press on firmly

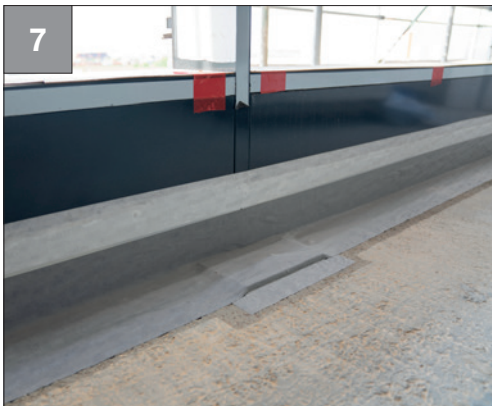

### How it should look:

- Floor-deep window / façade element connected to concrete floor



**Dockskin® 200**

P. 138

**Fentrim® 330 grey**

P. 139