




Wall: Timber construction *Windtight and rainproof on the outside*

Outdoor base joint



- Shake **Dockskin 100**
- Apply a covering coat
- Depending on temperature and substrate, wait until Dockskin 100 is transparent and sticky

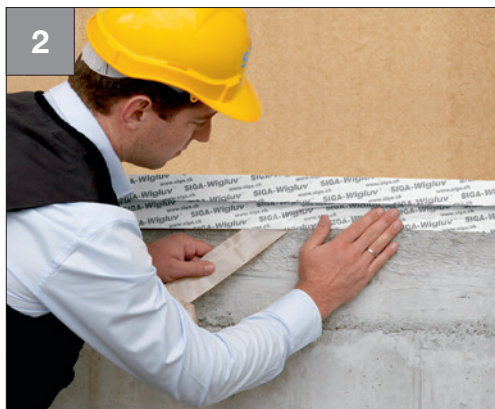

- Apply Wigluv in the middle, align
- Peel off backing strips one after the other, press down
- **Note:** make sure to apply sufficient Wigluv on the concrete and woodfibre boards



Dockskin® 100

P. 127

Wigluv® 100 & 150

P. 130

Wall: Timber construction *Windtight and rainproof on the outside*



Alternatively:



- Affix 50 mm side to facade membrane
- Affix perforated 85 mm side to concrete base
- Apply free of tension and creases and press it down vigorously

Alternatively:



- Apply Primur roll, align and press it down
- Remove backing strip
- Apply facade membrane free of tension and creases and press it down vigorously
- **Note:** This joint is suitable for Majvest 200 and Majvest 700



Fentrim® 2 50/85

P. 143



Primur® roll

P. 123