



Roof *Airtight on the inside*

Vapour control layer overlaps



- Release the Sicrall backing strip
- Position Sicrall in the centre of the overlap and secure it in place



- Remove backing strip
- Apply Sicrall free of tension and creases and press it down vigorously




How it should look:

- The overlap is sealed with Sicrall 60 and permanently airtight



Sealing the crease so that it is airtight:

- Seal the crease in a "T" shape away from the overlap using Sicrall




Butt-joint



- Apply Sicral along the centre of the joint



- Press it on with a hard rubber roller
- Improves the immediate adhesion

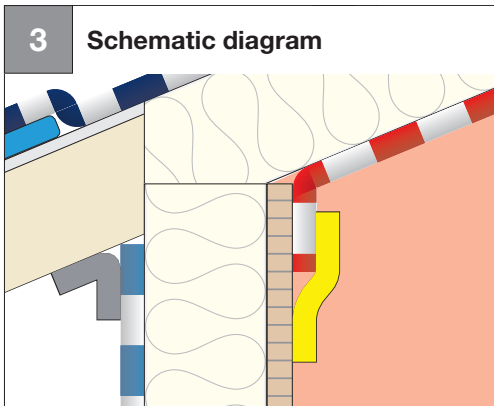

- Vapour control layer joined to timber wall with Sicral

