



## Wall: Solid construction

**Windtight and rainproof on the outside**

### Joining roof underlay membrane to solid wall construction - plastered masonry



#### Example of a dormer wall connection:

- Clean the substrate and roof underlay membrane
- Apply Primur, align it and press on firmly
- Make a stress-relief loop in the membrane, press down the membrane firmly without tension or wrinkles
- Cut off any excess membrane

#### Example of a chimney:




**Primur® roll**

P. 123



**Alternatively:**

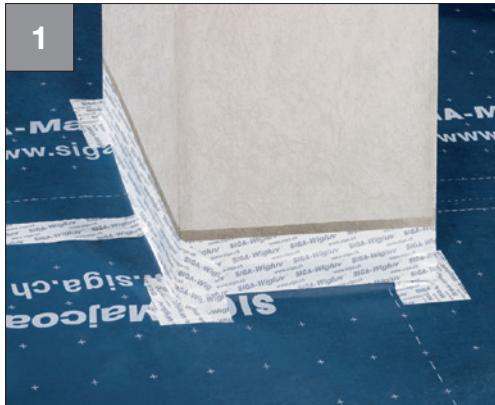

**Example of a chimney:**

- Bond the membrane with Dockskin and Wigluv 100 or Wigluv 150 to the masonry or plaster



**Dockskin® 200**

P. 138

**Wigluv® 100 & 150**

P. 130

**Dockskin® 100**

P. 127